# USB to RS485/422 Serial port converter

Model: MWE820A

#### **♦** Brief introduction

The MWE820A is a USB to RS-485/RS-422 converter with power supply from USB port that no need external power supply.

### **♦** Main Function

- According to USB2.0 criterion, plug and play supported;
- Long-distance awoken and power manage;
- •Particular protect circuit of the port ,static and lightning strike resisting;
- ●Intelligent module inside ,identifying and transmitting the RS-485/RS-422signal flow automatically with no delay;
- •Industry level design, excellent import element chosen, all surface adhibit technics.

## **♦** Capability parameter

in the state of th				
Baud rate	300~115200bps			
Communication Distance	1.5Km			
Isolation protection	15Kv static protecting,600W/ms lightning protecting			
Ambient Relative Humidity	$0{\sim}95\%$ (non-condensing)			
Working temperature	-40~85℃			
Software support	WIN98/2K/XP/7 ,Apple OS8/OS9			

# **♦ PIN Setting**

PIN	1	2	3	4	5
Define	TX+(A+)	TX-(B-)	RX+	RX-	GND

#### **♦** Product

### Indicator lights:

A.Sent light

B.Receive light

#### Connect metheod:

When connect with RS485

- 1.Connect the MWE820A A+ port with RS485 A+ port
- 2.Connect the MWE820A B- port with RS485 B- port

When conenct with RS422:

- 1. Connect the MWE820A TX+ port with RS422 RX+ port
- 2.Connect the MWE820ATX- port with other RS422 RX- port
- 3. Connect the MWE820A RX+ port with other RS422 TX+ port
- 4. Connect the MWE820A RX- port with other RS422 TX- port
- 5.GND connect with ground or connect each other, When use shield line, Shielding layer connect with ground
- 6.If RS485 communication distance more than 500m or disturbed,please Connect A+,B- with  $120\Omega$  terminal resistor

### **♦** Installation attention

After software install sucess, user PC create one port. This port could be use for normal user. Please setting save data to C:\SiLabs\

- **1.WIN98**:install WIN file,then go to "Device Remover"refresh "CP2101 USB to UART Bridge Controller".
- **2.WIN2000/WINXP**:install WIN/slabbus.sys file,then go to "Device Remover"refresh "slabser.sys".
  - 3.Apple OS8/OS9:Zip MAC "zip" file,then run installer.

# Quality promises

- 1.We can exchange the product in 1 years for the quality problem.
- 2.We guarantee to keep the product in good repair for 5 years.