EKI-2428G-4FA

Rackmount Ummanaged Redundant Industrial Switch

Overview

The EKI-2428G is an unmanaged switch with 24 Gigabit ports and 4 Gigabit SFP ports that can provide users with abundant ports to connect many devices. It is designed for rack-mount installation, and suitable for edge to core networks

Packing List

Before installation, please make sure that you have received the following:

- 1 x EKI-2428G-4FA Rackmount Ummanaged Switch
- 1 x Startup manual
 If anything is missing or damaged, contact your distributor or sales representative immediately.

Specifications

General

- Compatibility: IEEE 802.3, 802.3u, 802.3x, 802.3ab. 802.3z
- I AN: 10/100/1000 Base-TX
- SFP: Up to 110 km (depends on SFP)
- Ethernet RJ-45 Distance: Up to 100m
- Connectors:

24 x 10/100/1000Base-T/TX RJ-45 4 x SFP(mini-GBIC) port

- Power Requirements: 100~240V single AC power input
- Power Consumption: 18W
- Dimensions (W x H x D): 442 x 44 x 211.1 mm
- Enclosure: Metal shell with solid mounting kits
- Operating Temperature: 0 ~ 55°C (32 ~ 131°F)
- Storage Temperature: -20 ~ 70°C (-4 ~ 158°F)
- Operating Humidity: 10 ~ 95%(non-condensing)
- Storage Humidity: 10 ~95% (non-condensing)
- EMC: CE FCC Class A
- Warranty: 5years


User Manual

Notes

For more detailed information, please refer to the full manual which can be found on the Advantech's website.

For more information on this and other Advantech products, please visit our websites at: http://www.advantech.com/products For technical support and service: http://www.advantech.com/support/ This startup manual is for EKI-2428G-4FA Part No: | 1st Edition | | | |

Overview

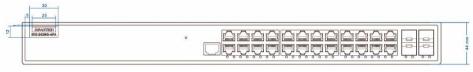

Warning: This is a Class A product. In domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Safety Instructions

- 1. Read these safety instructions carefully.
- 2. Keep this user manual for later reference.
- Disconnect this equipment from any AC outlet before cleaning. Use damp cloth. Do not use liquid or spray detergents for cleaning.
- For plug-in equipment, the power outlet socke must be located near the equip-ment and must be easily accessible.
- 5 Keep this equipment away from humidity
- Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- The openings on the enclosure are fo air convection.
 Protect the equipment from overheating. DO NOT
 COVER THE OPENINGS
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Position the power cord so that people cannot step on it. Do not place anything over the powercord.
- All cautions and warning on the equipment should be noted
- If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient over voltage.
- 12. Never pour any liquid into an opening. This may cause fire or electrical shock.
- Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- 14. If one of the following situations arises, get the equipment checked by service personnel:
 - · The power cord or plug is damaged.
 - · Liquid has peretrated into the equipment.
 - · The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user manual.
 - •The equipment has been dropped and damaged.
 - · The equipment has obvious signs of breakage.
- 15. Do NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20°C (-4°F) OR ABOVE 70°C (158°F) THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.

Rack Mounting

 Position one bracket to align with the holes on one side of the switch and secure it with the bracket screws. Then attach the remaining bracket to the other side of the Switch



 After attaching the mounting brackets, position the EKI-2428G-4FA Ummanaged Switch in the rack by lining up the holes in the brackets with the appropriate holes on the rack. Secure the Switch to the rack by a screw driver with the rack-mounting screws.

