

PCIE-1752

**64-ch Isolated Digital Output PCI
Express Card**

User Manual

Copyright

The documentation and the software included with this product are copyrighted 2012 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Part No. 2003E75210

1st Edition

Printed in Taiwan

March 2012

Product Warranty (2 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for two years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

- Step 1. Visit the Advantech web site at **www.advantech.com/support** where you can find the latest information about the product.
- Step 2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- PCIE-1752 DA&C Card
- StartUp or User Manual
- Companion DVD-ROM with DAQNav drivers included

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

1. To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
2. Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

Contents

Chapter	1	Introduction	2
	1.1	Features	2
	1.2	Applications	4
	1.3	Installation Guide	4
		Figure 1.1:Installation Flow Chart	5
	1.4	Software Overview	6
	1.5	DAQNavi Device Driver Programming Roadmap	7
	1.6	Accessories.....	8
Chapter	2	Installation	10
	2.1	Unpacking	10
	2.2	Driver Installation	11
		Figure 2.1:Setup Screen of Advantech Automation Software 11	
		Figure 2.2:DAQNavi Installation Setup Screen	12
	2.3	Hardware Installation.....	13
	2.4	Device Setup & Configuration	14
		Figure 2.3:The Device Setting of PCIE-1752	14
		Figure 2.4:The Digital I/O Setting Page	15
		Figure 2.5:The Device Testing of PCIE-1752	16
Chapter	3	Signal Connections	18
	3.1	Overview	18
	3.2	Switch and Jumper Settings	18
		Figure 3.1:Connector and Switch Locations	18
	3.2.1	Board ID (SW1)	19
		Table 3.1:Board ID Setting (SW1)	19
	3.2.2	Power On Configuration(JP1)	20
		Table 3.2:Power on configuration after hot reset (JP1) 20	
	3.2.3	Channel-Freeze Function (JP2)	20
		Table 3.3:Channel-Freeze Function Input Mode (JP2) 20	
	3.3	Signal Connections.....	21
		Figure 3.2: I/O Connector Pin Assignments	21
	3.3.1	I/O Connector Pin Definition	22
		Table 3.4:I/O Connector Signal Descriptions	22
	3.3.2	Isolated Digital Output	23
		Figure 3.3:Isolated Digital Output Connection	23
	3.3.3	Channel-Freeze Function	23
		Figure 3.4:Wiring in wet contact input mode	23
		Figure 3.5:Wiring in dry contact input mode	24
	3.4	Field Wiring Considerations	24
Appendix	A	Specifications	26
	A.1	Isolated Digital Output	26
	A.2	General	26

Appendix B	Block Diagrams	28
Appendix C	ADAM-3951 Pin Assignment	30
	Figure C.1:Connect to PCL-10250 CON1	30
	Figure C.2:Connect to PCL-10250 CON2	31

Introduction

This chapter introduces the PCIE-1752 cards and their typical applications.

Sections include:

- Features
- Applications
- Installation Guide
- Software Overview
- Device Driver Roadmap
- Accessories

Chapter 1 Introduction

Thank you for buying the Advantech PCIE-1752 which is a 64-ch isolated digital output card. It is an advanced-performance data acquisition card based on 32-bit PCI Express bus architecture. It features a unique circuit design and complete functions for data acquisition and control. The following sections of this chapter will provide further information about features of PCIE-1752, a Quick Start for installation, together with some brief information on software and accessories.

1.1 Features

- 64 isolated digital output channels
- High-voltage isolation on output channels (2,500 V_{DC})
- Wide output range (5 ~ 40 V_{DC})
- High-sink current for isolated output channels (500 mA max./ch)
- Output status read-back
- Keeps the output settings and values after system hot reset
- Channel-Freeze function
- Board ID

PCIE-1752 offers the following main features:

Robust Protection

The PCIE-1752 features a robust isolation protection for applications in industrial, lab and machinery automation. The PCIE-1752 can durably withstand a voltage up to 2,500 V_{DC}, preventing your host system from any incidental harms.

Wide Output Range

The PCIE-1752 also features a wide output voltage range from 5 to 40 V_{DC}, suitable for most industrial applications with 12 V_{DC}/24 V_{DC} output voltage. In the mean time, we are also ready to serve your special needs for specific output voltage range. Do not hesitate to ask us about tailoring our standard products to meet your specifications. All these merits make PCIE-1752 the best choice for industrial applications.

Board ID Setting

The PCIE-1752 has a built-in DIP switch that helps define each card's ID when multiple cards have been installed on the same PC chassis. The board ID setting function is very useful when users build their system with multiple PCIE-1752 cards. With correct Board ID settings, you can easily identify and access each card during hardware configuration and software programming.

Channel-Freeze Function

The PCIE-1752 provides Channel-Freeze function, which can be enabled either in dry contact or wet contact mode (selectable by the on-board jumper). When the Channel-Freeze function is enabled, the last status of each digital output channel will be safely kept for emergency use. Moreover, you can enable this function through software as it is useful in software simulation and testing program.

Reset Protection

When the system has undergone a hot reset (i.e. without turning off the system power), the PCIE-1752 can either retain outputs values of each channel, or return to its default configuration as open status, depending on its on-board jumper setting. This function protects the system from wrong operations during unexpected system resets.

Note: For detailed specifications of the PCIE-1752, please refer to Appendix A.

1.2 Applications

- Industrial ON/OFF control
- Switch status sensing
- BCD interfacing
- Digital I/O control
- Industrial and lab automation

1.3 Installation Guide

Before you install your PCIE-1752 card, please make sure you have the following necessary components:

PCIE-1752 DA&C Card

PCIE-1752 StartUp or User Manual

Driver Software Advantech DAQNav software (included in DVD-ROM)

Wiring Cable PCL-10250 or PCL-101100M (optional)

Wiring Board ADAM-3951 or ADAM-39100 (optional)

Computer PC or workstation with PCI Express bus slot (running Windows XP/Vista/7)

Other optional components are also available for enhanced operation:

- Advantech DAQ tools, LabView or other 3rd-party software

After you get the necessary components and maybe some accessories for enhanced operation for your DA&C card, you can then begin the installation procedures. Figure 1-1 on the next page provides a concise flow chart to give users a broad picture of the software and hardware installation procedures:

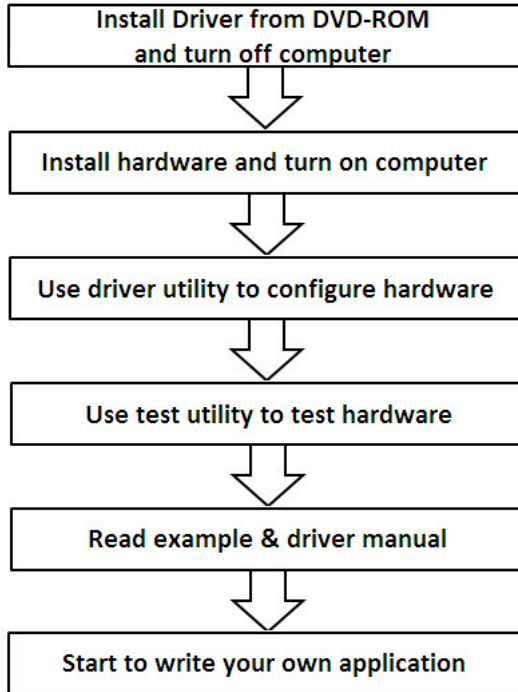


Figure 1.1: Installation Flow Chart

1.4 Software Overview

Advantech offers a rich set of DLL drivers, third-party driver support and application software to help fully exploit the functions of your PCIE-1752 card:

- DAQNav software (on the companion DVD-ROM)
- LabView driver
- Advantech DAQ tools

Programming choices for DA&C cards

You may use Advantech application software such as Advantech DAQNav software. On the other hand, advanced users can use register-level programming, although this is not recommended due to its laborious and time-consuming nature.

DAQNav Software

Advantech DAQNav software includes device drivers and SDK which features a complete I/O function library to help boost your application performance. This software is included in the companion DVD-ROM at no extra charge and comes with all Advantech DA&C cards. The Advantech DAQNav software for Windows XP/Vista/7 works seamlessly with development tools such as Visual Studio .Net, Visual C++, Visual Basic and Borland Delphi.

Register-level Programming

Register-level programming is available for experienced programmers who find it necessary to write code directly at the level of the device register. Since register-level programming requires much effort and time, we recommend that you use the Advantech DAQNav software instead. However, if register-level programming is indispensable, please contact the technical support team to request the relative information.

1.5 DAQNav Device Driver Programming Roadmap

This section will provide you a roadmap to demonstrate how to build an application from scratch using Advantech DAQNav device drivers with your favorite development tools such as Visual Studio.Net, Visual C++, Visual Basic and Borland Delphi. The step-by-step instructions on how to build your own applications using each development tool will be given in the *DAQNav SDK Manual*. Moreover, a rich set of example source code is also given for your reference.

Programming Tools

Programmers can develop application programs with their favorite development tools:

- Visual Studio .Net
- Visual C++ and Visual Basic
- Borland Delphi

For instructions on how to begin programming works in each development tool, Advantech offers Tutorial Chapter in the *DAQNav SDK Manual* for your reference. Please refer to the corresponding sections in this chapter on the *DAQNav SDK Manual* to begin your programming efforts. You can also look at the example source code provided for each programming tool, since they can get you very well oriented.

The *DAQNav SDK Manual* can be found on the companion DVD-ROM. Alternatively, if you have already installed the DAQNav SDK on your system, the *DAQNav SDK Manual* can be readily accessed through the Start button:

Start\Programs\Advantech Automation\DAQNav\DAQNav Manuals\DAQNav SDK Manual

The example source code could be found under the corresponding installation folder such as the default installation path:

\Advantech\DAQNav\Examples

For information about using other function groups or other development tools, please refer to the *Using DAQNav SDK* chapter in the *DAQNav SDK Manual*, or the video tutorials in the Advantech Navigator.

Programming with DAQNav Device Drivers Function Library

Advantech DAQNav device drivers offer a rich function library that can be utilized in various application programs. This function library consists of numerous APIs that support many development tools, such as Visual Studio .Net, Visual C++, Visual Basic and Borland Delphi.

According to their specific functions or services, APIs can be categorized into several function groups:

- Analog Input Function Group
- Analog Output Function Group
- Digital Input/Output Function Group
- Counter Function Group

For the usage and parameters of each function, please refer to the *Using DAQNav SDK* chapter in the *DAQNav SDK Manual*.

Troubleshooting DAQNav Device Drivers Error

Driver functions will return a status code when they are called to perform a certain task for the application. When a function returns a code that is not success, it means the function has failed to perform its designated function. To troubleshoot the device drivers error, you can check the error code and error description within the Error Control of each function in the *DAQNav SDK Manual*.

1.6 Accessories

Advantech offers a complete set of accessory products to support the PCIE-1752 card. These accessories include:

Wiring Cables

PCL-10250 The PCL-10250 is a 100-pin SCSI to two 50-pin SCSI shielded cable that specially designed for PCIE-1752 card. It should be used with ADAM-3951 wiring board.

PCL-101100M The PCL-101100M cable is a 100pin SCSI shielded cable. It can be used with ADAM-39100 wiring board.

Wiring Boards

ADAM-3951 The ADAM-3951 is a 50-pin SCSI wiring terminal module with LED indicators for DIN-rail mounting.

ADAM-39100 The ADAM-39100 is a 100-pin SCSI wiring terminal module with DIN-rail mounting.

Installation

This chapter provides a packaged item checklist, proper instructions for unpacking and step-by-step procedures for both driver and card installation.

Sections include:

- Unpacking
- Driver Installation
- Hardware Installation
- Device Setup & Configuration

Chapter 2 Installation

2.1 Unpacking

After receiving your PCIE-1752 package, please inspect its contents first. The package should contain the following items:

- PCIE-1752 DA&C Card
- StartUp or User Manual
- Companion DVD-ROM with DAQNav drivers included.

The PCIE-1752 cards harbor certain electronic components vulnerable to *electrostatic discharge* (ESD). ESD can easily damage the integrated circuits and certain components if preventive measures are ignored.

Before removing the card from the antistatic plastic bag, you should take the following precautions to ward off possible ESD damage:

- Touch the metal part of your computer chassis with your hand to discharge the static electricity accumulated on your body. Alternatively, one can also use a grounding strap.
- Touch the anti-static bag to a metal part of your computer chassis before opening the bag.
- Take hold of the card only by the metal bracket when removing it out of the bag.

After taking out the card, you should first:

- Inspect the card for any possible signs of external damage (loose or damaged components, etc.). If the card is visibly damaged, please notify our service department or our local sales representative immediately. Do not install a damaged card into your system.

Also, pay extra caution to the following aspects during installation:

- Avoid physical contact with materials that could hold static electricity such as plastic, vinyl and Styrofoam.
- Whenever you handle the card, grasp it only by its edges. DO NOT TOUCH the exposed metal pins of the connector or the electronic components. .

Note: *Keep the anti-static bag for future use. You might need the original bag to store the card if you have to remove the card from a PC or transport it elsewhere.*

2.2 Driver Installation

We recommend you install the driver before you install the PCIE-1752 card into your system, since this will guarantee a smooth installation process.

The Advantech DAQNav Device Drivers Setup program for the PCIE-1752 card is included in the companion DVD-ROM that is shipped with your DA&C card package. Please follow the steps below to install the driver software:

1. Insert the companion DVD-ROM into your DVD-ROM drive.
2. The Setup program will be launched automatically if you have the autoplay function enabled on your system. When the Setup Program is launched, you will see the following Setup Screen.

Note: If the autoplay function is not enabled on your computer, use Windows Explorer or Windows Run command to execute autorun.exe on the companion DVD-ROM.



Figure 2.1: Setup Screen of Advantech Automation Software

3. Select the DAQNav option to install.
4. Select the *Individual Driver* option.

5. Select the PCIE series and the specific device then follow the installation instructions step by step to complete your device driver installation and setup.
6. Back and select the DAQNav SDK to install the Advantech Navigator.

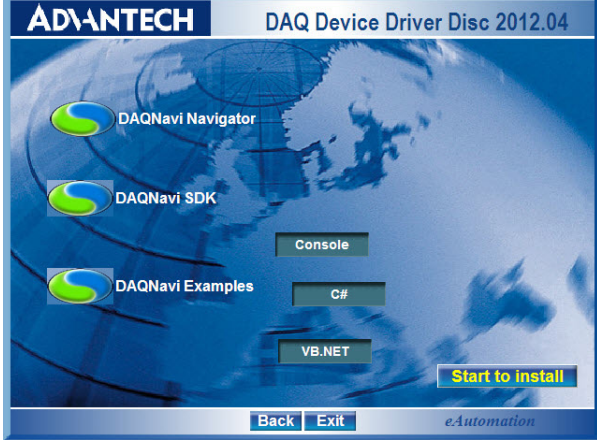


Figure 2.2: DAQNav Installation Setup Screen

For further information on driver-related issues, an online version of the *DAQNav SDK Manual* is available by accessing the following path:

Start/Programs/Advantech Automation/DAQNav/DAQNav Manuals/DAQNav SDK Manual

Note: *You can always get the latest DAQNav device drivers and SDK from the Advantech Support Portal: <http://support.advantech.com.tw/support/default.aspx>*

2.3 Hardware Installation

Note: Make sure you have installed the driver before you install the card (please refer to chapter 2.2 Driver Installation)

After the Device Drivers installation is completed you can install the PCIE-1752 card into any PCI Express slot on your computer. However, it is suggested that you refer to the computer's user manual or related documentation if you have any doubts. Please follow the steps below to install the card onto your system.

1. Turn off your computer and unplug the power cord and cables. TURN OFF your computer before installing or removing any components on the computer.
2. Remove the cover of your computer.
3. Remove the slot cover on the back panel of your computer.
4. Touch the metal part on the surface of your computer to neutralize the static electricity that might be on your body.
5. Insert the PCIE-1752 card into a PCI Express slot. Hold the card only by its edges and carefully align it with the slot. Insert the card firmly into place. Use of excessive force must be avoided; otherwise, the card might be damaged.
6. Fasten the bracket of the PCI card on the back panel rail of the computer with screws.
7. Connect appropriate accessories (100-pin cable, wiring terminals, etc. if necessary) to the PCIE-1752 card.
8. Replace the cover of your computer chassis. Re-connect the cables you removed in step 2.
9. Plug in the power cord and turn on the computer.

After your card is properly installed on your system, you can now configure your device using the Advantech Navigator Program that has itself already been installed on your system during driver setup. A complete device installation procedure should include *device setup*, *configuration* and *testing*. The following sections will guide you through the Setup, Configuration and Testing of your device.

2.4 Device Setup & Configuration

The Advantech Navigator program is a utility that allows you to setup, configure and test your device, and later stores your settings on the system registry. These settings will be used when you call the APIs of DAQNav device drivers. It also provides the programming reference, user guides and video tutorials.

Setting Up the Device

1. To install the I/O device for your card, you must first run the Advantech Navigator program (by accessing **Start/Programs/Advantech Automation/DAQNavi/Advantech Navigator**).
2. You can then view the device(s) already installed on your system (if any) on the Installed Devices list. If the software and hardware installation are completed, you will see PCIE-1752 card in the Installed Devices list.

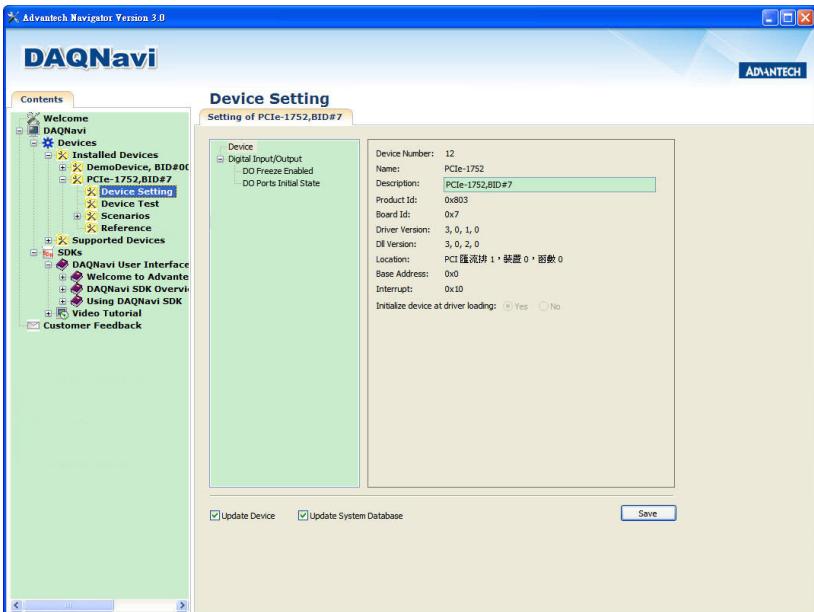


Figure 2.3: The Device Setting of PCIE-1752

Configuring the Device

3. Please go to the Digital Input/Output page to configure your device. Here you can not only enable/disable the Channel-Freeze function but also the DO ports initial status of PCIE-1752.

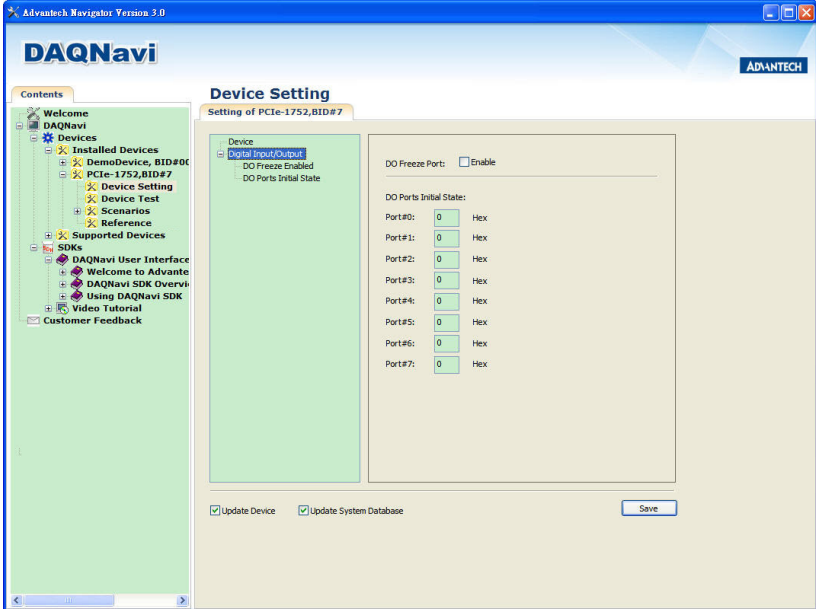


Figure 2.4: The Digital I/O Setting Page

4. After your card is properly installed and configured, you can go to the Device Test page to test your hardware by using the testing utility supplied.

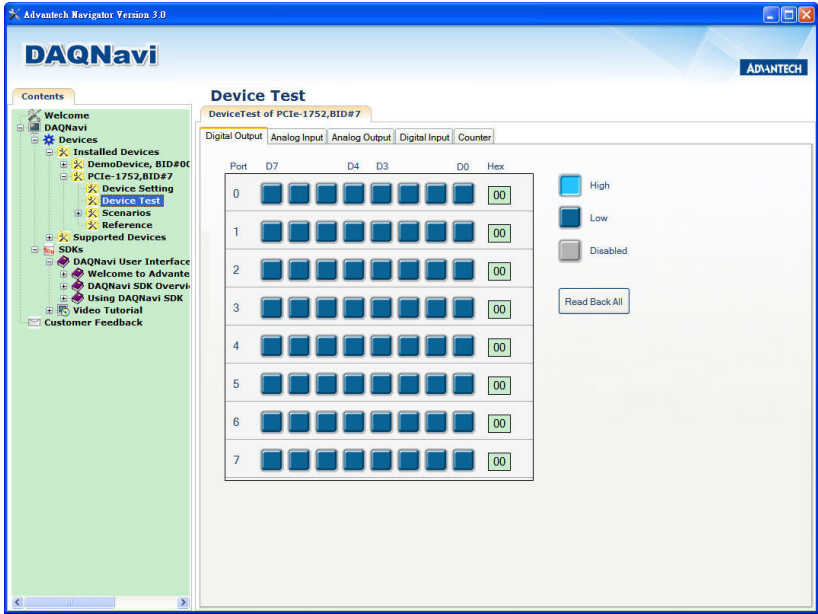


Figure 2.5: The Device Testing of PCIE-1752

For more detailed information, please refer to the *DAQNavi SDK Manual* or the *User Interface Manual* in the Advantech Navigator.

Signal Connections

This chapter provides useful information about how to connect input and output signals to the PCIE-1752 cards via the I/O connector.

Sections include:

- Overview
- Switch and Jumper Settings
- Signal Connections
- Field Wiring Considerations

Chapter 3 Signal Connections

3.1 Overview

Maintaining signal connections is one of the most important factors in ensuring that your application system is sending and receiving data correctly. A good signal connection can avoid unnecessary and costly damage to your PC and other hardware devices. This chapter provides useful information about how to connect input and output signals to the PCIE-1752 cards via the I/O connector.

3.2 Switch and Jumper Settings

Please refer to Figure 3.1 for jumper and switch locations on PCIE-1752.



Figure 3.1: Connector and Switch Locations

3.2.1 Board ID (SW1)

The PCIE-1752 have a built-in DIP switch (SW1), which is used to define each card's board ID. When there are multiple cards on the same chassis, this board ID switch is useful for identifying each card's device number. After setting for each PCIE-1752, you can identify each card in system with different device numbers. The default value of board ID is 0 and if you need to adjust it to other value, please set the SW1 by referring to Table 3.1.



Table 3.1: Board ID Setting (SW1)

BoardID (dec)	Switch Position			
	1 (ID3)	2 (ID2)	3 (ID1)	4 (ID0)
* = default				
0	ON	ON	ON	ON
1	ON	ON	ON	OFF
2	ON	ON	OFF	ON
3	ON	ON	OFF	OFF
4	ON	OFF	ON	ON
5	ON	OFF	ON	OFF
6	ON	OFF	OFF	ON
7	ON	OFF	OFF	OFF
8	OFF	ON	ON	ON
9	OFF	ON	ON	OFF
10	OFF	ON	OFF	ON
11	OFF	ON	OFF	OFF
12	OFF	OFF	ON	ON
13	OFF	OFF	ON	OFF
14	OFF	OFF	OFF	ON
15	OFF	OFF	OFF	OFF

Default Setting is 0

3.2.2 Power On Configuration(JP1)

Default configuration after power on, and hardware reset is to set all the isolated output channels to open status (the current of the load can't be sink) so that the external devices will not be damaged when the system starts or resets. When the system is hot reset, then the status of isolated digital output channels are selected by jumper JP1. Table 3.2 shows the configuration of jumper JP1.



Table 3.2: Power on configuration after hot reset (JP1)	
JP1	Power on configuration after hot reset
	Keep last status after hot reset
	Default configuration (Default setting)

3.2.3 Channel-Freeze Function (JP2)

The PCIE-1752 provides the channel-freeze function for isolated digital output channels. When Channel-Freeze function is enabled, all ports on the card will be locked so that the data transmitted (from the host PC) to the card won't be transferred to the DO ports. Once the Channel-Freeze function is enabled, each port status is immediately frozen into its last valid value before the Channel-Freeze. Since the value transmitted (from the host PC) to the card is also stored in the buffers on PC, users can call the relative function to read back the DO channel value, this function will determine that:

- If Channel-Freeze function is disabled, it will return the DO value on the port
- If Channel-Freeze function is enabled, it will return the value from the buffers on host PC

Refer to Table 3.3 for setting dry/wet contact of Channel-Freeze function.


Table 3.3: Channel-Freeze Function Input Mode (JP2)	
JP2	Power on configuration after hot reset
	Channel-Freeze function dry contact input mode
	Channel-Freeze function wet contact input mode (Default setting)

3.3 Signal Connections

Pin Assignment

The I/O connector on the PCIE-1752 is a 100-pin connector that enable you to connect to accessories with the PCL-10250 or PCL-101100M shielded cable.

Figure 3.2 shows the pin assignments for the 100-pin I/O connector on the PCIE-1752, and Table 3.4 shows its I/O connector signal description.



IDO00	1	51	IDO01
IDO02	2	52	IDO03
IDO04	3	53	IDO05
IDO06	4	54	IDO07
IDO08	5	55	IDO09
IDO10	6	56	IDO11
IDO12	7	57	IDO13
IDO14	8	58	IDO15
PCOM0	9	59	PCOM0
PCOM0	10	60	PCOM0
IGND	11	61	IGND
IGND	12	62	IGND
IDO16	13	63	IDO17
IDO18	14	64	IDO19
IDO20	15	65	IDO21
IDO22	16	66	IDO23
IDO24	17	67	IDO25
IDO26	18	68	IDO27
IDO28	19	69	IDO29
IDO30	20	70	IDO31
PCOM1	21	71	PCOM1
PCOM1	22	72	PCOM1
IGND	23	73	IGND
IGND	24	74	IGND
CH_FRZ_IN	25	75	CH_FRZ_COM
IDO32	26	76	IDO33
IDO34	27	77	IDO35
IDO36	28	78	IDO37
IDO38	29	79	IDO39
IDO40	30	80	IDO41
IDO42	31	81	IDO43
IDO44	32	82	IDO45
IDO46	33	83	IDO47
PCOM2	34	84	PCOM2
PCOM2	35	85	PCOM2
IGND	36	86	IGND
IGND	37	87	IGND
IDO48	38	88	IDO49
IDO50	39	89	IDO51
IDO52	40	90	IDO53
IDO54	41	91	IDO55
IDO56	42	92	IDO57
IDO58	43	93	IDO59
IDO60	44	94	IDO61
IDO62	45	95	IDO63
PCOM3	46	96	PCOM3
PCOM3	47	97	PCOM3
IGND	48	98	IGND
IGND	49	99	IGND
CH_FRZ_IN	50	100	CH_FRZ_COM

Figure 3.2: I/O Connector Pin Assignments

*Note: The PCL-10250 shielded cable is especially designed for the PCIE-1752 to reduce noise in the signal lines. Please refer to Appendix C for the pin assignment of connecting PCL-10250 and ADAM-3951.

3.3.1 I/O Connector Pin Definition

Table 3.4: I/O Connector Signal Descriptions

Pin Name	Reference	Direction	Description
IDO<00 ~ 15>	PCOM0	Output	Isolated digital output of group 0
IDO<16 ~ 31>	PCOM1	Output	Isolated digital output of group 1
IDO<32 ~ 47>	PCOM2	Output	Isolated digital output of group 2
IDO<48~ 63>	PCOM3	Output	Isolated digital output of group 3
PCOM0	-	Input	Common pin of IDO00~IDO15 for inductive loads
PCOM1	-	Input	Common pin of IDO16~IDO31 for inductive loads
PCOM2	-	Input	Common pin of IDO32~IDO47 for inductive loads
PCOM3	-	Input	Common pin of IDO48~IDO63 for inductive loads
IGND	-	-	Isolated ground
CH_FRZ_IN	CH_FRZ_COM	Input	Channel-Freeze function input pin
CH_FRZ_COM	-	Input	Common pin for Channel-Freeze function input

3.3.2 Isolated Digital Output

Each of isolated output channels comes equipped with a MOSFET, polyswitch (for current protection) and flywheel diode for using with inductive loads which can be activated by connecting PCOM to V_{DC} . If an external voltage ($5 \sim 40 V_{DC}$) is applied to an isolated output channel, the current will flow from the external voltage source to the card. Please note that the current through each IDO channel should not exceed 500 mA.

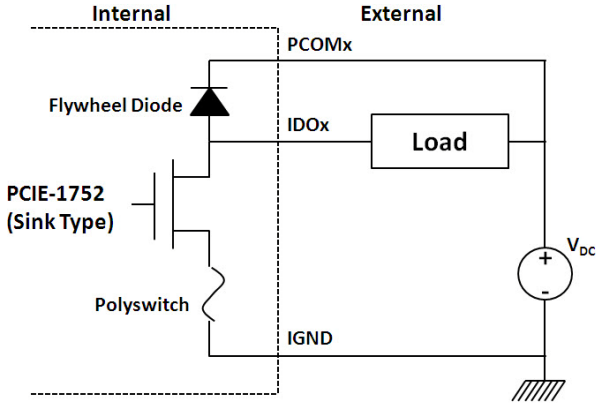


Figure 3.3: Isolated Digital Output Connection

3.3.3 Channel-Freeze Function

The PCIE-1752 provides a digital input channel (CH_FRZ_IN) to enable the channel-freeze function. The channel-freeze function acts when the pin CH_FRZ_IN is activated. Moreover, you can setup the input mode of channel-freeze function input channel CH_FRZ_IN as dry contact input mode or wet contact input mode selected by on-board jumper JP2. The wiring in wet contact and dry contact input mode are shown in Figures 3.4 and 3.5.

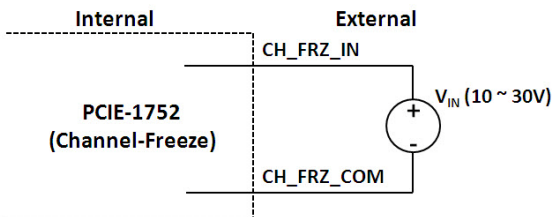


Figure 3.4: Wiring in wet contact input mode

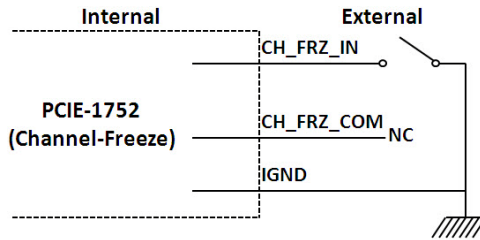


Figure 3.5: Wiring in dry contact input mode

3.4 Field Wiring Considerations

When you use PCIE-1752 cards to acquire data from outside, noises in the environment might significantly affect the accuracy of your measurements if due cautions are not taken. The following measures will be helpful to reduce possible interference running signal wires between signal sources and the PCIE-1752 card.

- The signal cables must be kept away from strong electromagnetic sources such as power lines, large electric motors, circuit breakers or welding machines, since they may cause strong electromagnetic interference. Keep the analog signal cables away from any video monitor, since it can significantly affect a data acquisition system.
- If the cable travels through an area with significant electromagnetic interference, you should adopt individually shielded, twisted-pair wires as the analog input cable. This type of cable has its signal wires twisted together and shielded with a metal mesh. The metal mesh should only be connected to one point at the signal source ground.
- Avoid running the signal cables through any conduit that might have power lines in it.
- If you have to place your signal cable parallel to a power line that has a high voltage or high current running through it, try to keep a safe distance between them. Alternatively, you can place the signal cable at a right angle to the power line to minimize the undesirable effect.
- The signals transmitted on the cable will be directly affected by the quality of the cable. In order to ensure better signal quality, we recommend that you use the PCL-10250 or PCL-101100M shielded cable.

APPENDIX
A

Specifications

Appendix A Specifications

A.1 Isolated Digital Output

Output Channels	64
Output Type	Sink (NPN)
Isolation Protection	2,500 V _{DC}
Output Voltage	5 ~ 40 V _{DC}
Sink Current	500 mA max./channel
Opto-isolator Response	50 μs

A.2 General


Bus Type	PCI Express V1.0
I/O Connectors	1 x 100-pin SCSI female connector
Dimensions (L x H)	175 x 100mm (6.9" x 3.9")
Power Consumption	Typical: 3.3 V @ 485 mA Max.: 3.3 V @ 530 mA; 12V @ 90 mA
Operating Temperature	0 ~ 60°C (32 ~ 140°F)
Storage Temperature	-20 ~ 70°C (-4 ~ 158°F)
Storage Humidity	5 ~ 95% RH, non-condensing (refer to IEC 68-2-3)

APPENDIX

B

Block Diagrams

Appendix B Block Diagrams

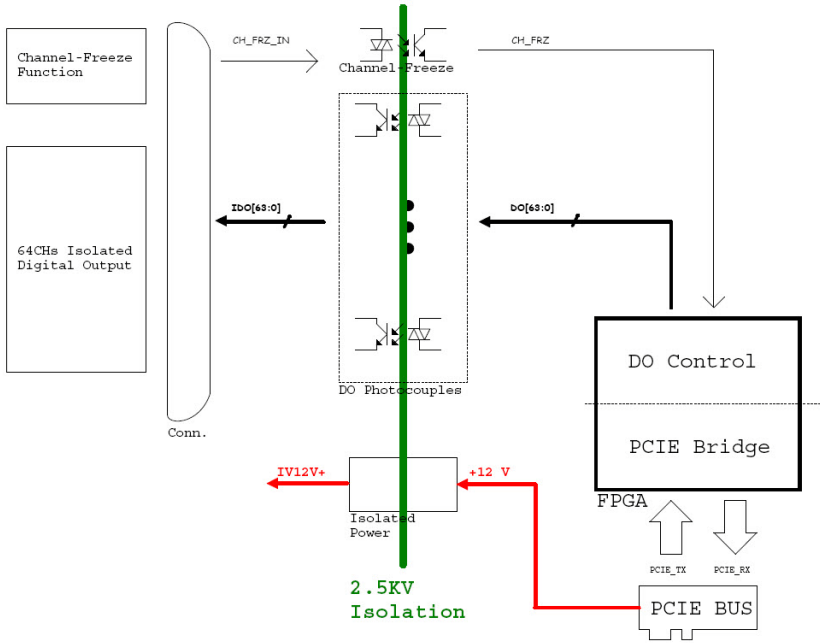

APPENDIX

C

ADAM-3951 Pin Assignment

Appendix C ADAM-3951 Pin Assignment

Please refer to Figure C.1 and Figure C.2 for the pin assignments if you select Advantech ADAM-3951 as your wiring board for connecting to PCL-10250 and PCIE-1752.



















































TB1			TB2		
1		IDO 00	26		IDO 16
2		IDO 01	27		IDO 17
3		IDO 02	28		IDO 18
4		IDO 03	29		IDO 19
5		IDO 04	30		IDO 20
6		IDO 05	31		IDO 21
7		IDO 06	32		IDO 22
8		IDO 07	33		IDO 23
9		IDO 08	34		IDO 24
10		IDO 09	35		IDO 25
11		IDO 10	36		IDO 26
12		IDO 11	37		IDO 27
13		IDO 12	38		IDO 28
14		IDO 13	39		IDO 29
15		IDO 14	40		IDO 30
16		IDO 15	41		IDO 31
17		PCOM0	42		PCOM1
18		PCOM0	43		PCOM1
19		PCOM0	44		PCOM1
20		PCOM0	45		PCOM1
21		IGND	46		IGND
22		IGND	47		IGND
23		IGND	48		IGND
24		IGND	49		IGND
25		CH_FRZ_IN	50		CH_FRZ_COM

Figure C.1: Connect to PCL-10250 CON1

TB1			TB2		
1	⊖	IDO 32	26	⊖	IDO 48
2	⊖	IDO 33	27	⊖	IDO 49
3	⊖	IDO 34	28	⊖	IDO 50
4	⊖	IDO 35	29	⊖	IDO 51
5	⊖	IDO 36	30	⊖	IDO 52
6	⊖	IDO 37	31	⊖	IDO 53
7	⊖	IDO 38	32	⊖	IDO 54
8	⊖	IDO 39	33	⊖	IDO 55
9	⊖	IDO 40	34	⊖	IDO 56
10	⊖	IDO 41	35	⊖	IDO 57
11	⊖	IDO 42	36	⊖	IDO 58
12	⊖	IDO 43	37	⊖	IDO 59
13	⊖	IDO 44	38	⊖	IDO 60
14	⊖	IDO 45	39	⊖	IDO 61
15	⊖	IDO 46	40	⊖	IDO 62
16	⊖	IDO 47	41	⊖	IDO 63
17	⊖	PCOM2	42	⊖	PCOM3
18	⊖	PCOM2	43	⊖	PCOM3
19	⊖	PCOM2	44	⊖	PCOM3
20	⊖	PCOM2	45	⊖	PCOM3
21	⊖	IGND	46	⊖	IGND
22	⊖	IGND	47	⊖	IGND
23	⊖	IGND	48	⊖	IGND
24	⊖	IGND	49	⊖	IGND
25		CH_FRZ_IN	50		CH_FRZ_COM

Figure C.2: Connect to PCL-10250 CON2

