

# **AWK-4121**

## **Hardware Installation Guide**

---

**Moxa AirWorks**

**Sixth Edition, October 2014**

**MOXA<sup>®</sup>**

© 2014 Moxa Inc. All rights reserved.

**P/N: 1802041210015**

## Notes for the Reader



### **WARNING**

Indicates that death or personal injury may occur if proper precautions are not taken.



### **ATTENTION**

Indicates that possible damage to this product or your property may result if proper precautions are not taken.

**NOTE** Highlights important information related to this product.


## Package Checklist

Moxa's AWK-4121 is shipped with the following items. If any of these items is missing or damaged, please contact your customer service representative for assistance.

- AWK-4121
- 2 omni-directional antennas (2/5 dBi, N-type male, 2.4/5 GHz)
- Wall mounting kit (includes 2 supports)
- Field-installable power plug
- Field-installable RJ45 plug
- Metal cap to cover M12 female DI/O connector
- Metal cap to cover RJ45 connector
- Documentation and software CD
- Quick installation guide (printed)
- Warranty card

**NOTE** The above items come with the AWK-4121 standard version. The package contents for customized versions may be different.

## Panel Layout of the AWK-4121

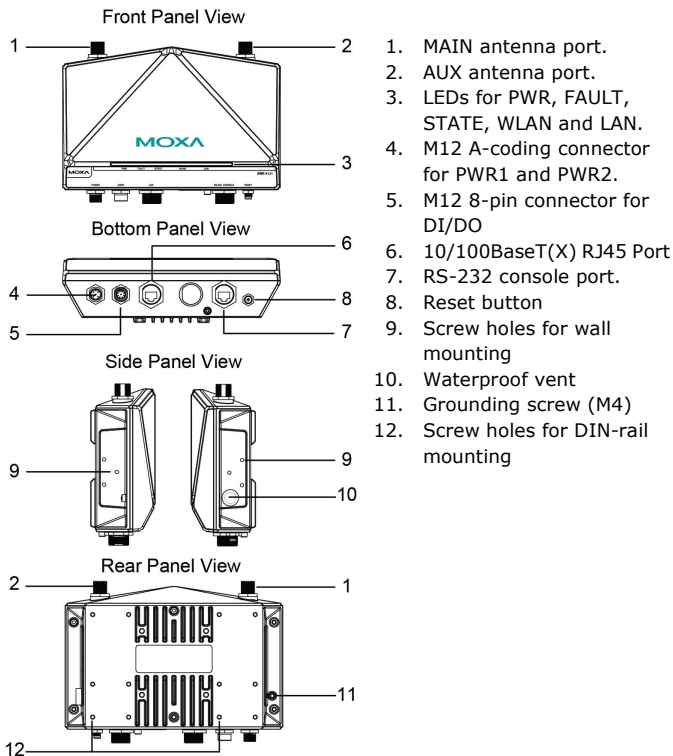


### ATTENTION

Please DO NOT open or remove the vent **10**. The warranty will be invalid if the seal is removed.


All exposed connectors, including **1, 2, 4 - 8**, should be tightly covered by suitable caps when they are not in use.

## Dimensions (unit = mm)

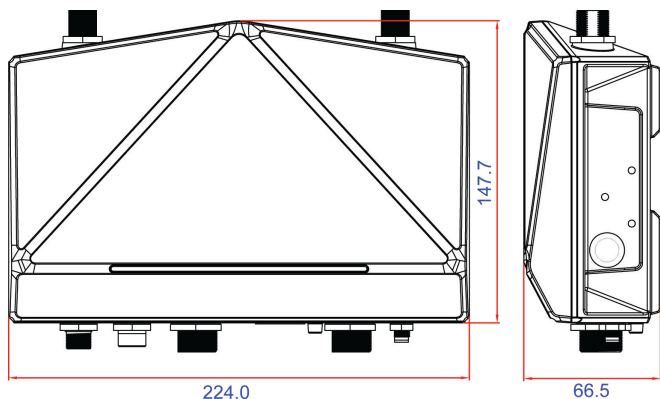

## Attaching Antennas

The AWK-4121 includes two dual-band omni-directional antenna by default. Attach the antennas as illustrated below.

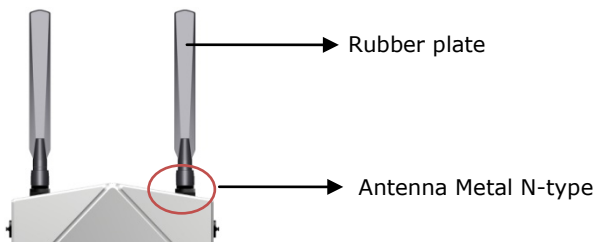

**Step 1:** Use your fingers and hold the antenna metal N-type connector.

**Step 2:** Screw the antenna N-type connector (male) onto the AWK-4121 device's N-type connector (female)



### Caution

Do not hold the rubber plate to screw the antenna on to the AWK-4121 device.



### ATTENTION


Use the antennas correctly: Use 2.4GHz antennas if the AWK-4121 operates in IEEE 802.11b/g. Use the 5GHz antennas for operations in IEEE802.11a. Make sure your antenna installation is within a safe area covered by a lightning protection or surge arrest system.

## Wall Mounting

In most applications, wall mount provides an easier installation. You will find it quite easy to mount AWK-4121 on the wall, as illustrated below.


### STEP 1:

Attach the wall-mounting kit with M4 screws, as shown in the diagram below.

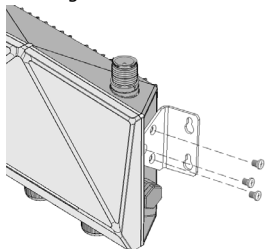

### STEP 2:

Mounting the AWK-4121 on the wall requires 4 screws. Use the AWK-4121 device, with wall-mounting kit attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws are recommended to be between 5.5mm and 8.5 mm in diameter, and the shafts should not be more than 5.0 mm in diameter, as shown in the figure.

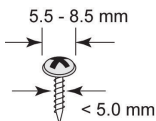

Do not screw the screws all the way in to the wall—leave a space of about 2 mm to allow room for sliding the wall-mounting kit between the wall and the screws.




### ATTENTION

You can test the screw head and shank size by inserting the screw into one of the keyhole shaped apertures of the wall mounting plates before it is screwed into the wall.

### STEP 3:


Once the screws are fixed into the wall, insert the four screw heads through the large opening of the keyhole-shaped apertures, and then slide the AWK-4121 downwards, as indicated to the right. Tighten the four screws for added stability.

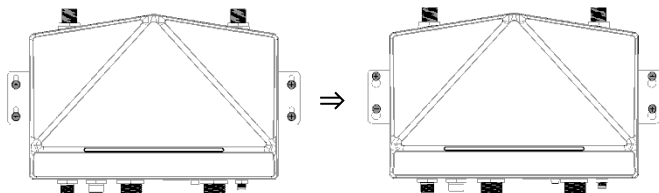

### ATTENTION

To avoid environmental vibration or shock, you can consider a robust installation with four bigger screws, which the shafts are between 7.0 mm and 8.5 mm in diameter, and fix the AWK-4121 onto wall directly and tightly.

## DIN-Rail Mounting (Optional)

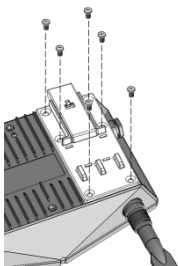


The DK-DC50131 die-cast metal kit can be bought separately, and enable easy and robust installation for the AWK-4121. A pair of DK-DC50131s is needed for DIN-Rail mounting. To install the DIN-Rail mounting kits, tightly attach the two DIN-Rail mounting kits on the rear panel of AWK-4121 with 12 screws. (6 screws for each kit)

### To Install

#### STEP 1:

Use the recessed button on the spring-loaded bracket to lock it into position.

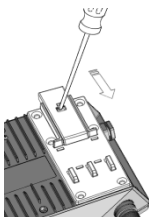

#### STEP 2:


Insert the top of the DIN-Rail into the slot just below the upper hook of the DIN-Rail mounting kit. Push the AWK-4121 toward the DIN-Rail until the DIN-Rail attachment bracket snaps into place.



### To Release


#### STEP 1:

Pull out the two spring-loaded brackets from the bottom until they are fixed in the "release" position.

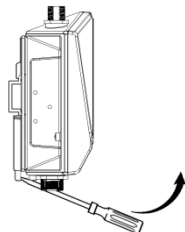

#### STEP 2:

Pull the AWK-4121 out and upward.

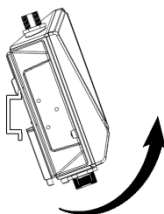

## Wiring Requirements



### WARNING

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Moxa AWK-4121.

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowable for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following items:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.  
**NOTE:** Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring with similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- It is strongly advised that you label wiring to all devices in the system when necessary.

## Grounding Moxa AWK-4121

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.




### ATTENTION

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel. There must be no potential difference between two ground potentials, otherwise there is a risk that the device could be destroyed.

## Wiring the Redundant Power Inputs

The AWK-4121 must be connected to a power-over-Ethernet (PoE) IEEE 802.3af compliant power source or an IEC60950 compliant limited power source. When AWK-4121 is powered via DC power, the M12 A-coding connector on the bottom panel is used for the AWK-4121's two redundant inputs. The pin assignment is shown below:

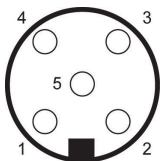

Pin	Power Input
1	V1+
2	V2+
3	V1-
4	V2-
5	GND



## ATTENTION

This product is intended to be supplied by a Listed Power Unit marked "Class 2" or "LPS" and rated O/P: 12 to 48 VDC, minimum 6 W (12 V/0.494 A to 48V/0.121 A, 25°C).

Make sure External Power Adaptor (includes power cords and plug assemblies) provided with the unit is certified and suitable for use in your country.

Before connecting the AWK-4121 to the DC power inputs, make sure the DC power source voltage is stable.



## Wiring the Digital Inputs and Relay Contact

### (Digital Output)

The AWK-4121 has two sets of digital input—DI1 and DI2. Each DI comprises two contacts of the 8-pin M12 connector on the AWK-4121's bottom panel. These two digital inputs can be connected to digital-output-enabled sensors for on-site status monitoring.

The AWK-4121 also has one relay output, which consists of the two contacts. These relay contacts are used to detect user-configured events. The two wires attached to the Relay contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the Relay circuit will be closed.

A field-installable plug, **M12A-8PMM-IP68**, is recommended for connecting the AWK-4121's DIs and relay.

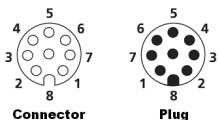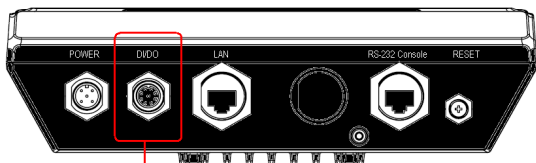

Pin	Signal
1	Relay
2	
3	DI1 I1
4	DI1 COM_1
5	DI2 I2
6	DI2 COM_2
7	Reserved
8	




## Communication Connections

### 10/100BaseT(X) Ethernet Port Connection

The 10/100BaseT(X) ports located on the AWK-4121's bottom panel are used to connect to Ethernet-enabled devices.

Below we show pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports.

MDI Port Pinouts		MDI-X Port Pinouts		8-pin RJ45
Pin	Signal	Pin	Signal	
1	Tx+	1	Rx+	
2	Tx-	2	Rx-	
3	Rx+	3	Tx+	
6	Rx-	6	Tx-	

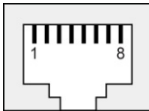


### RS-232 Connection

The AWK-4121 has one RS-232 (8-pin RJ45) console port located on the bottom panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable to connect the Moxa AWK-4121's console port to your PC's COM port. You may then use a console terminal program to access the AWK-4121 for console configuration.

#### Console Pinouts for 10-pin or 8-pin RJ45

10-Pin	Description	8-Pin
1	-----	
2	DSR	1
3	RTS	2
4	GND	3
5	TxD	4
6	RxD	5
7	DCD	6
8	CTS	7
9	DTR	8
10	-----	

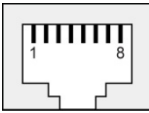

- NOTE**
1. The pin numbers for male DB9 and DB25 connectors, and hole numbers for female DB9 and DB25 connectors are labeled on the connector. However, the numbers are typically quite small, so you may need to use a magnifying glass to see the numbers clearly.
  2. The pin numbers for both 8-pin and 10-pin RJ45 connectors (and ports) are typically not labeled on the connector (or port). Refer to the Pinout diagram above to see how RJ45 pins are numbered.




## ATTENTION

To ensure the IP68-rated connectivity, you must use a waterproof housing during any communication activities. An IP68-rated field installable plug, which is attached in AWK-4121's accessory pack, may be needed in this case. The installation guide is shown below:

## Waterproof RJ45 Plug


### Dimensions (unit: mm)

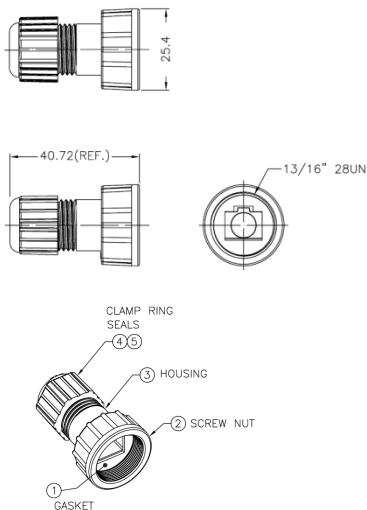

## Installation


### STEP 1:

Attach the gasket ① to the housing ③

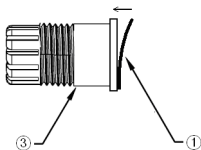


### STEP 2:

Insert the cable (ex. CAT5e) through the clamp ring ④, screw nut ②, seal ⑤ and housing ③, as follows:

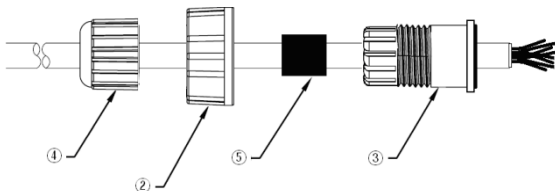

### STEP 3:


Crimp the modular RJ plug to the cable; (NOTE: the snagless cover shield and strain-relief boot are not recommended.) Then, assemble the seals and the housing (③ and ⑤).



### STEP 4:

Tightly screw the clamp ring ④ to the housing and check to make sure that the plug is securely fastened.

(NOTE: for a tighter connection, you can connect the RJ-45 plug to the AWK-4121 before STEP 4.)

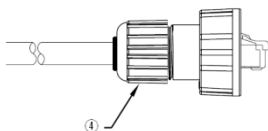

## LED Indicators

The front panel of the Moxa AWK-4121 contains several LED indicators. The function of each LED is described in the table below.

LED	Color	State	Description
<b>Front Panel LED Indicators (System)</b>			
<b>PWR</b>	Green	On	Power is being supplied (from power input 1 or 2, or PoE).
		Off	Power is <b>not</b> being supplied
<b>FAULT</b>	Red	Blink (slow)	Cannot get an IP address from the DHCP server (interval: 1 sec)
		Blink (fast)	IP address conflict (interval: 0.5 sec)
		Off	Error condition does not exist.
<b>WLAN</b>	Green	On	WLAN functions is in Client/Slave mode.
		Blink	WLAN's data communication is run in Client/Slave mode
		Off	WLAN is not in use or not working properly
	Amber	On	WLAN functions is in AP/Bridge mode.
		Blink	WLAN's data communication is run in AP/Master mode
		Off	WLAN is not in use or not working properly.
<b>LAN</b>	Green	On	LAN port's 100 Mbps link is <b>active</b> .
		Blink	Data is being transmitted at 1000 Mbps
		Off	LAN port's 100 Mbps link is <b>inactive</b> .
	Amber	On	LAN port's 10 Mbps link is <b>active</b> .
		Blink	Data is being transmitted at 10/100 Mbps
		Off	LAN port's 10 Mbps link is <b>inactive</b> .

## Specifications

WLAN Interface	
Standards	IEEE 802.11a/b/g/n for Wireless LAN IEEE 802.11i for Wireless Security IEEE 802.3 for 10BaseT IEEE 802.3u for 100BaseTX IEEE 802.3ab for 1000BaseT IEEE 802.3af for Power-over-Ethernet IEEE 802.1D for Spanning Tree Protocol IEEE 802.1w for Rapid STP IEEE 802.1Q VLAN
Spread Spectrum and Modulation (typical)	DSSS with DBPSK, DQPSK, CCK OFDM with BPSK, QPSK, 16QAM, 64QAM 802.11b: <ul style="list-style-type: none"> <li>• CCK @ 11/5.5 Mbps</li> <li>• DQPSK @ 2 Mbps</li> <li>• DBPSK @ 1 Mbps</li> </ul> 802.11a/g: <ul style="list-style-type: none"> <li>• 64QAM @ 54/48 Mbps</li> <li>• 16QAM @ 36/24 Mbps</li> <li>• QPSK @ 18/12 Mbps</li> <li>• BPSK @ 9/6 Mbps</li> </ul> 802.11n: <ul style="list-style-type: none"> <li>• 64QAM @ 300 bps to BPSK @ 6.5 Mbps (multiple rates supported)</li> </ul>
Operating Channels (central frequency)	US: <ul style="list-style-type: none"> <li>• 2.412 to 2.462 GHz (11 channels)</li> <li>• 5.18 to 5.24 GHz (4 channels)</li> </ul> EU: <ul style="list-style-type: none"> <li>• 2.412 to 2.472 GHz (13 channels)</li> <li>• 5.18 to 5.24 GHz (4 channels)</li> </ul> JP: <ul style="list-style-type: none"> <li>• 2.412 to 2.484 GHz (14 channels, channel 14 only supports DSSS)</li> <li>• 5.18 to 5.24 GHz (4 channels for W52)</li> </ul>
Security	SSID broadcast enable/disable Firewall for MAC/IP/Protocol/Port-based filtering 64-bit and 128-bit WEP encryption, WPA/WPA2-Personal and Enterprise (IEEE 802.1X/RADIUS · TKIP and AES)
Transmission Rates	802.11b: 1, 2, 5.5, 11 Mbps 802.11a/g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
TX Transmit Power	802.11b: Typ. 23±1.5 dBm @ 1 to 11 Mbps 802.11g: <ul style="list-style-type: none"> <li>• Typ. 20±1.5 dBm @ 6 to 24 Mbps</li> <li>• Typ. 19±1.5 dBm @ 36 Mbps</li> <li>• Typ. 18±1.5 dBm @ 48 Mbps</li> <li>• Typ. 17±1.5 dBm @ 54 Mbps</li> </ul> 802.11a: <ul style="list-style-type: none"> <li>• Typ. 18±1.5 dBm @ 6 to 24 Mbps</li> <li>• Typ. 16±1.5 dBm @ 36 to 48 Mbps</li> <li>• Typ. 15±1.5 dBm @ 54 Mbps</li> </ul>

RX Sensitivity	<p>802.11b:</p> <ul style="list-style-type: none"> <li>• -97 dBm @ 1 Mbps</li> <li>• -94 dBm @ 2 Mbps</li> <li>• -92 dBm @ 5.5 Mbps</li> <li>• -90 dBm @ 11 Mbps</li> </ul> <p>802.11g:</p> <ul style="list-style-type: none"> <li>• -93 dBm @ 6 Mbps</li> <li>• -91 dBm @ 9 Mbps</li> <li>• -90 dBm @ 12 Mbps</li> <li>• -88 dBm @ 18 Mbps</li> <li>• -84 dBm @ 24 Mbps</li> <li>• -80 dBm @ 36 Mbps</li> <li>• -76 dBm @ 48 Mbps</li> <li>• -74 dBm @ 54 Mbps</li> </ul> <p>802.11a:</p> <ul style="list-style-type: none"> <li>• -90 dBm @ 6 Mbps</li> <li>• -89 dBm @ 9 Mbps</li> <li>• -89 dBm @ 12 Mbps</li> <li>• -85 dBm @ 18 Mbps</li> <li>• -83 dBm @ 24 Mbps</li> <li>• -79 dBm @ 36 Mbps</li> <li>• -75 dBm @ 48 Mbps</li> <li>• -74 dBm @ 54 Mbps</li> </ul>
<b>Protocol Support</b>	
General Protocols	Proxy ARP, DNS, HTTP, HTTPS, IP, ICMP, SNMP, TCP, UDP, RADIUS, SNMP, PPPoE, DHCP, LLDP
AP-only Protocols	ARP, BOOTP, DHCP, dynamic VLAN-Tags for 802.1X-Clients, STP/RSTP (IEEE 802.1D/w)
<b>Interface</b>	
Default Antennas	2 dual-band omni-directional antennas, 5 dBi at 2.4 GHz, 2 dBi at 5 GHz, N-type (male)
Connector for External Antennas	N-type (female)
RJ45 Ports	1, 10/100BaseT(X), auto negotiation speed
Console Port	RS-232 (waterproof RJ45-type)
Reset	Present
LED Indicators	PWR, FAULT, STATE, WLAN, LAN
Alarm Contact	1 relay output with current carrying capacity of 1 A @ 24 VDC, M12 male type
Digital Inputs	2 electrically isolated inputs , M12 male type +13 to +30 V for state "1" +3 to -30 V for state "0" Max. input current: 8 mA
<b>Physical Characteristics</b>	
Housing	Metal, providing IP68 protection
Weight	1.5 kg
Dimensions	224 x 148 x 67 mm (8.82 x 5.82 x 2.62 in)
Installation	Wall mounting (standard), DIN-Rail mounting (optional), pole mounting (optional)
<b>Environmental Limits</b>	
Operating Temperature	-40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative	5% to 100% (non-condensing)

Humidity	
<b>Power Requirements</b>	
Input Voltage	12 to 48 VDC, redundant dual DC power inputs or 48 VDC Power-over-Ethernet (IEEE 802.3af compliant)
Connector	M12 connector with A-coding
Power Consumption	6 W (12 V/0.494 A to 48V/0.121 A, 25°C)
Reverse Polarity Protection	Present
<b>Standards and Certifications</b>	
Safety	UL 60950-1, EN 60950-1
Hazardous Location	UL/cUL Class I Division 2, ATEX Zone 2
EMC	EN 301 489-1/17; FCC Part 15, Subpart B; EN 55022/55024
Radio	EN 300 328, EN 301 893, TELEC
<b>Note: Check Moxa's website for the most up-to-date certification status.</b>	
<b>Reliability</b>	
MTBF	364,564 hrs
<b>Warranty</b>	
Warranty Period	5 years
Details	See <a href="http://www.moxa.com/support/warranty.aspx">www.moxa.com/support/warranty.aspx</a>



### ATTENTION

The AWK-4121 is NOT a portable mobile device and should be located 20cm away from the human body.  
 The AWK-4121 is NOT designed for the general public. To deploy AWK-4121s and establish a wireless network safely, a well-trained technician is required for installation.



### ATTENTION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
 1. This device may not cause harmful interference, and  
 2. This device must accept any interference received, including interference that may cause undesired operation.



### ATTENTION

Do not locate the antenna near overhead power lines or other electric light or power circuits, or where it can come into contact with such circuits. When installing the antenna. Take extreme care not to come into contact with such circuits, because they may cause serious injury or death. For proper installation and grounding of the antenna. please refer to national and local codes (for example, U.S.:NFPA 70, National Electrical Code, Article 810, Canada: Canadian Electrical Code, Section 54).

**NOTE** For installation flexibility, either the MAIN antenna or the AUX antenna may be selected for use. Make sure the antenna connection matches the antenna configured in the AWK-4121 interface.

To protect the connectors and RF module, all radio ports should be terminated by either an antenna or a terminator. The use of the resistive terminator for terminating the unused antenna port is strongly recommended.



## ATTENTION

For EXPLOSION-PROOF application, model AWK-4121 are designed and certified to meet ATEX and C1D2 and shall be mounted in a suitable enclosure rate to at least IP54 and Pollution Degree 2 as defined in EN60529 and used within its rated electrical and environmental ratings.



## ATTENTION

To ensure the IP68-rated connectivity, you must use a waterproof housing during any communication activities. An IP68-rated field installable plug, which is attached in AWK- 4000 and AWK-6000 series' accessory pack, may be needed in this case. Please reference product's installation guide.



CMIIT ID:2009AJ5303

電波法によりW52の屋外使用は禁止されています



DEMKO  
10 ATEX 1010601X  
Ex nA IIC T4 Gc  
Ambient Range:  
-40°C ≤ Tamb ≤ 75°C  
WARNING-DO NOT  
SEPARATE  
WHEN ENERGIZED  
Rated Cable Temp. ≥ 93°C



I.T.E. for Use in Hazardous Locations  
86CY  
Class I, Division 2  
Groups A, B, C and D  
Temp. Code T5  
Max Ambient 60°C



I.T.E.  
E212360

Fl.4, No.135, Lane 235, Baoqiao Rd. Xindian Dist., New Taipei City, Taiwan, R.O.C

## Technical Support Contact Information

[www.moxa.com/support](http://www.moxa.com/support)

### Moxa Americas:

Toll-free: 1-888-669-2872  
Tel: 1-714-528-6777  
Fax: 1-714-528-6778

### Moxa Europe:

Tel: +49-89-3 70 03 99-0  
Fax: +49-89-3 70 03 99-99

### Moxa China (Shanghai office):

Toll-free: 800-820-5036  
Tel: +86-21-5258-9955  
Fax: +86-21-5258-5505

### Moxa Asia-Pacific:

Tel: +886-2-8919-1230  
Fax: +886-2-8919-1231